




## Dynalite Fitting Instructions

### NEGATIVE EARTH CARS ONLY

#### Wiring Instructions for replacing Lucas dynamo

1. Remove field lead (F) and warning light (WL) from regulator and attach together
2. Remove dynamo lead (D) from regulator and attach to battery positive lead to create a battery positive feed.
3. Main alternator feed from battery must be rated at 45 amps minimum.

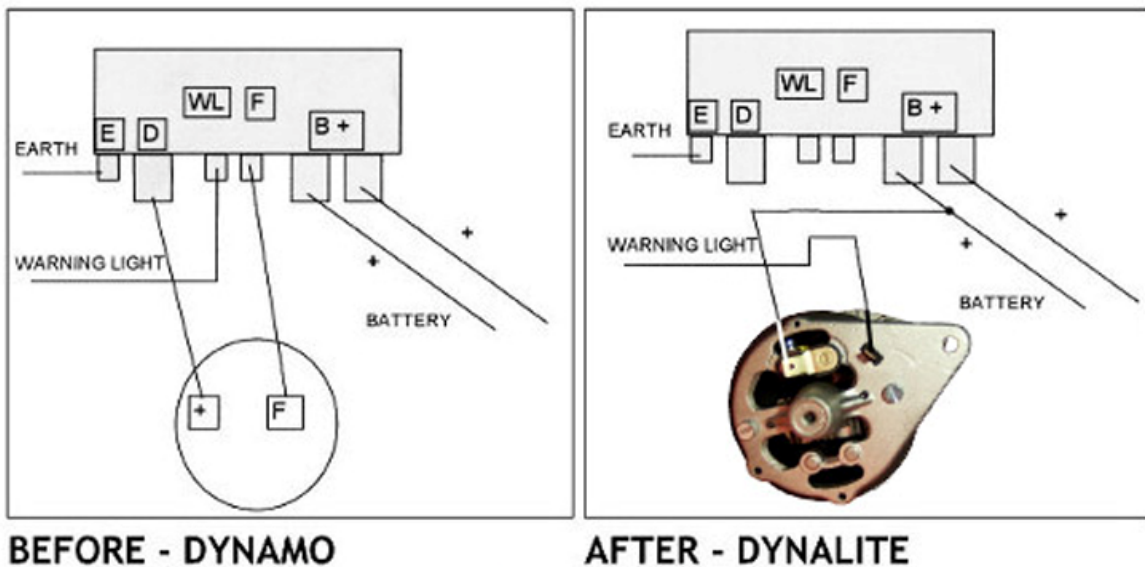

#### Important Note

Please ensure that there is a good earth connection – particularly if the car has been recently painted