



# RAC014 Positive Earth Fitting Instructions

## To replace a C45 dynamo and RF95 control box.

*Only RF95 control boxes can be replaced by this unit, refer to your supplier for other types.*


**Please ensure you have the following equipment.**

**RAC014 Dynalite.**

**Replacement RF95 Control Box.**

**Relay** - Terminals 86 and 30 pre-wired to body/earth connection.

1. Ensure Battery is disconnected.
2. Remove the dynamo and swap pulley and any spacers to the Dynalite.
3. Remove the control box RF95 making sure that all cables are clearly marked for re-fit,
4. Replace with the new supplied control box.
5. Re-fit the Dynalite and cables except the warning tight wire that should be fitted as indicated on terminal F. Ensure the wire from Dynalite and to battery are rated at 40 amps minimum.
6. Locate the wire from the ignition switch to the warning Light under the dash. In a suitable position fix the new relay to the bodywork ensuring a good earth.
7. Cut the Located wire and fix to relay as indicated.
8. Re-connect battery and test

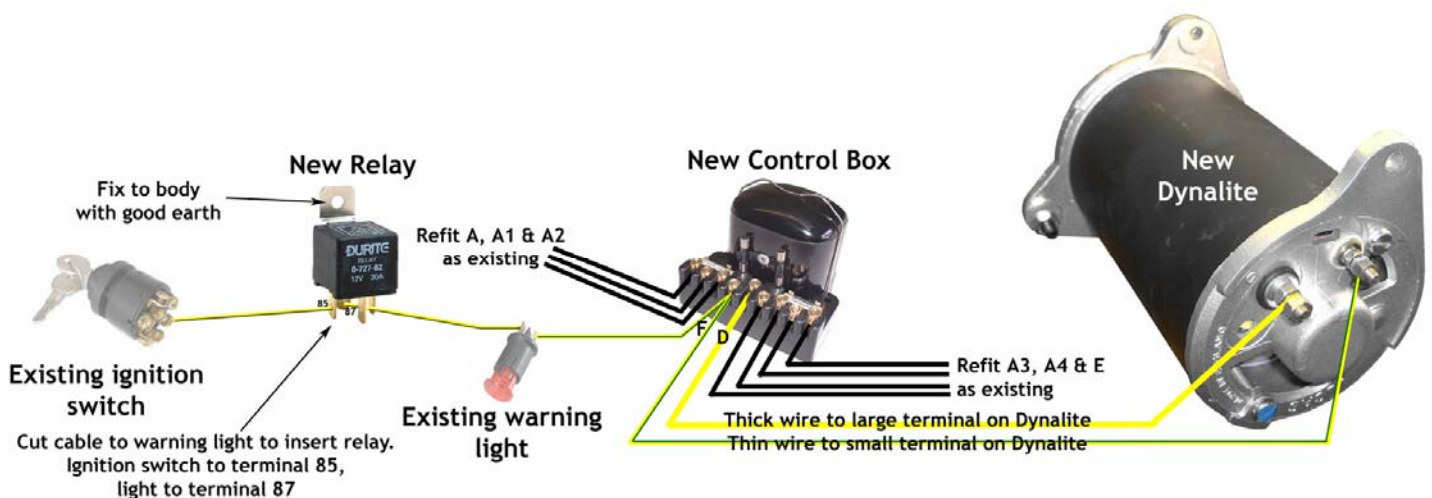

### Important Note

**Ensure the relay and the Dynalite have a good earth, particularly if the engine/car has been recently painted.**

***If in Doubt, consult your supplier or a qualified auto electrician.***